

Shower Door  
1/4" glass (6mm)

# INSTALLATION GUIDE

CAUTION: To reduce the risk of breakage, keep corner protectors on glass while installing.  
Keep corner protectors for use in case future adjustments are needed.  
Consult your local plumbing codes prior to installation.

MODEL:  
19343672CH06NP  
19343672MB06NP




## TOOLS REQUIRED

### Drill Bits


Ø1/4" (6mm) & Ø1/8" (3mm) dia.  
HSS




### Screw Driver

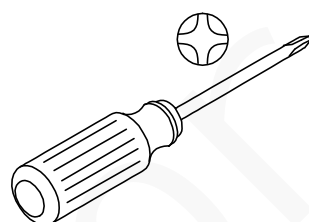


### Drill

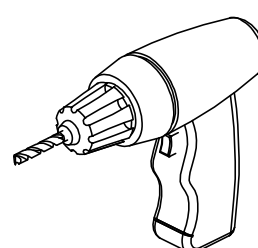


### Level

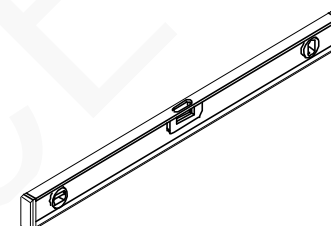


### Silicone

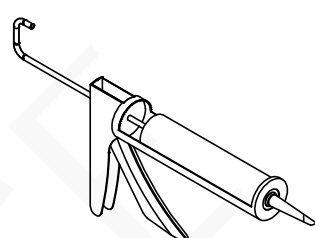


### Measuring Tape

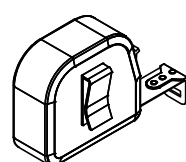


### Soft Head Hammer

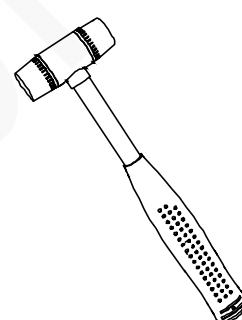


### Pencil

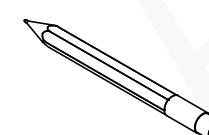

### Knife

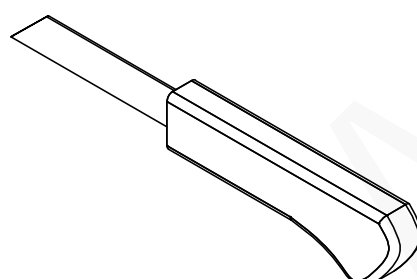


### Sealant

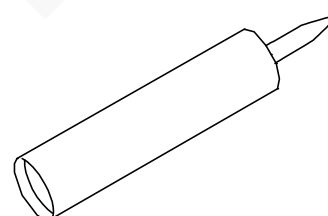

### MASONRY DRILL BIT FOR TILE Ø6mm




### Safety Glasses

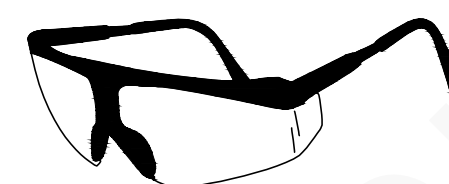


### Glove



### Carpenter's Squarer

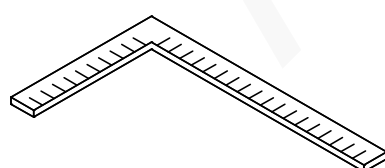

### Masking or painter's tape

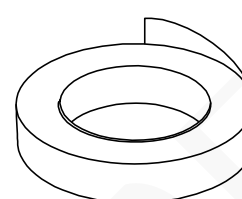

**CAUTION:** When cutting or drilling metal components or when handling glass, to reduce the risk of personal injury, protective eye wear, gloves, and closed-toe shoes are required.

## SAFETY INFORMATION

### CAUTION

Please carefully read the following important safety information before handling or installing this shower. There is a risk of serious injury while handling this product.


To minimize these risks, please note:

- Always wear safety glasses and gloves while handling.
- Always follow the installation instructions.
- Inspect glass for damage before installation.
- Extreme caution should be taken while handling the glass during installation as the tempered glass may shatter if in contact with a hard surface.
- Do not cut or modify the tempered glass as it will shatter if cut.
- Carefully remove product from packaging and keep packaging until installation is complete.
- Inspect all parts for damage or missing; if there is damage or part missing to the unit prior to installation, please contact customer service at the number provided in this guide.
- Cover the drain with tape to prevent the loss of small parts.
- The shower base and finished walls should be installed before beginning the shower door installation.
- During the installation, protect the shower floor with a drop cloth to avoid damage.
- This product should be installed by two people who are familiar with construction requirements. Professional installation is recommended!
- Keep this installation manual for future reference.

**NOTE: Two people should perform this installation.**



DOOR ASSEMBLY

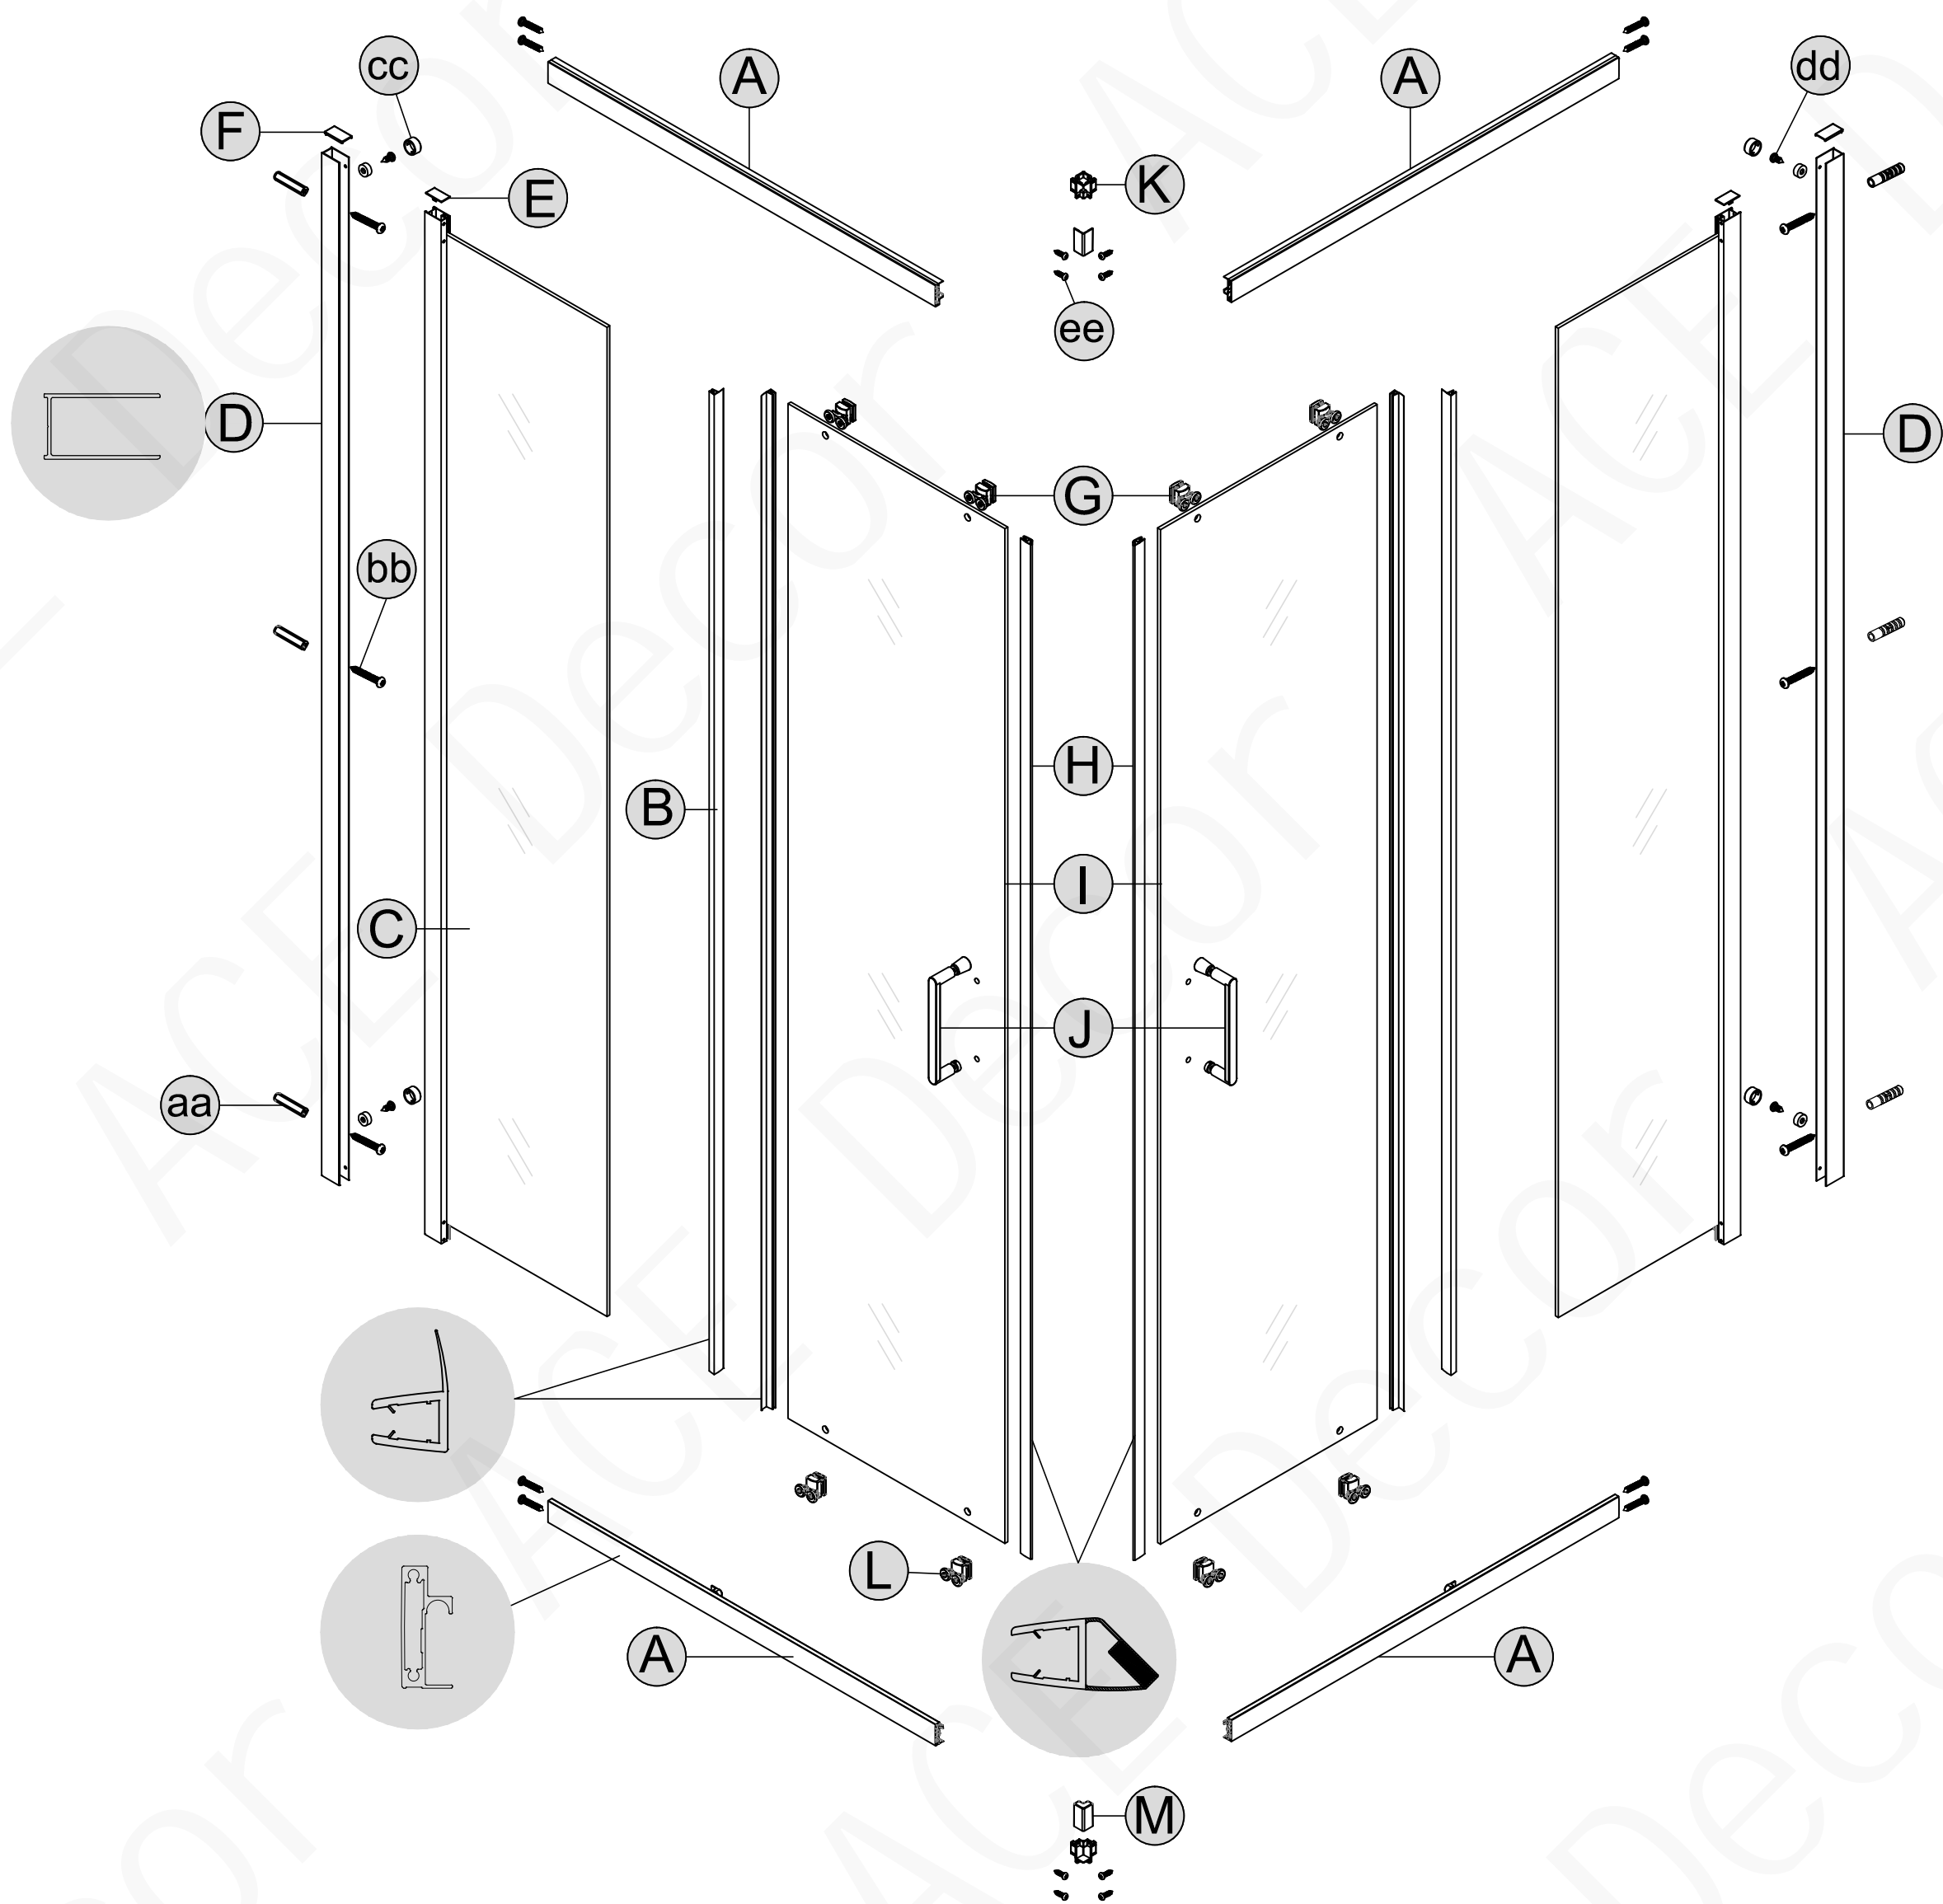


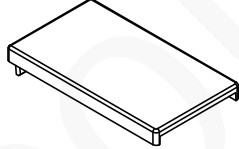
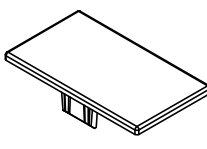
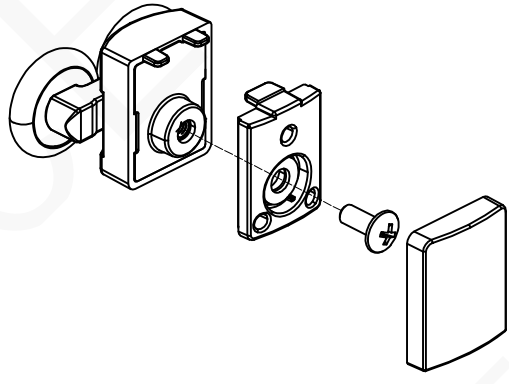
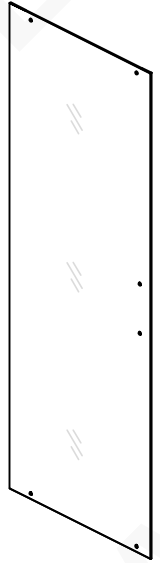
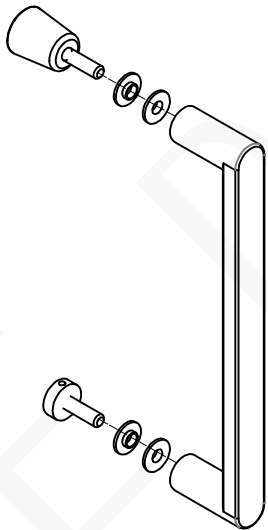
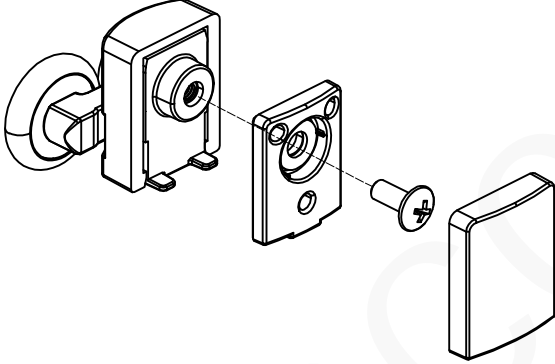
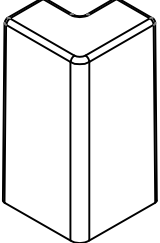
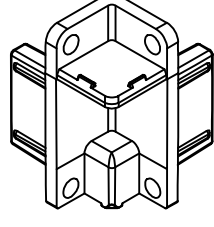
PACKAGE CONTENT

PART#	DESCRIPTION	QTY
A	Top and bottom Rail	4
B	Anti-Water Strip	4
C	Stationary Glass	2
D	Wall jamb	2
E	Wall profile top inner cap	2
F	Wall profile top outside cap	2







PART#	DESCRIPTION	QTY
G	Top Roller	4
H	Magnetic Strip	2
I	Glass door	2
J	Handle	2
K	Rail connector	2
L	Bottom Roller	4
M	Rail connector cover	2

# CARTON PARTS IDENTIFICATION

See following pages for detailed component diagrams

 <b>C X2</b> Stationary Glass	 <b>E X2</b> Wall profile top outside cap	 <b>F X2</b> Wall profile top inner cap	 <b>G X4</b> Top Roller
 <b>I X2</b> Glass door	 <b>J X2</b> Handle	 <b>L X4</b> Bottom Roller	<div><div> <b>M X2</b> Rail connector cover</div><div> <b>K X2</b> Rail connector</div></div>

# HARDWARE CONTENT

 <b>aa</b> Wall anchor Ø6x38mm 7 pcs	 <b>bb</b> Screw ST4*30 7 pcs	 <b>cc</b> Screw cover 5 pcs	 <b>dd</b> Screw ST4*10 5 pcs	 <b>ee</b> Screw ST4*16 9 pcs	 <b>ff</b> Screw ST4*20 9 pcs
-------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------

 Additional spare parts are included.

**NOTE: Inspect all parts for missing prior to installation!  
Contact us for any part missing.**



# 1-1 Wall Jamb (D) Installation

TABLE 1 - Enclosure assembly measurements

Measure from the finished corner to the outside edge of wall profile as shown:	
Model No.	W1 / W2
19343672CH06NP 19343672MB06NP	33-7/8" ~ 34-5/8"

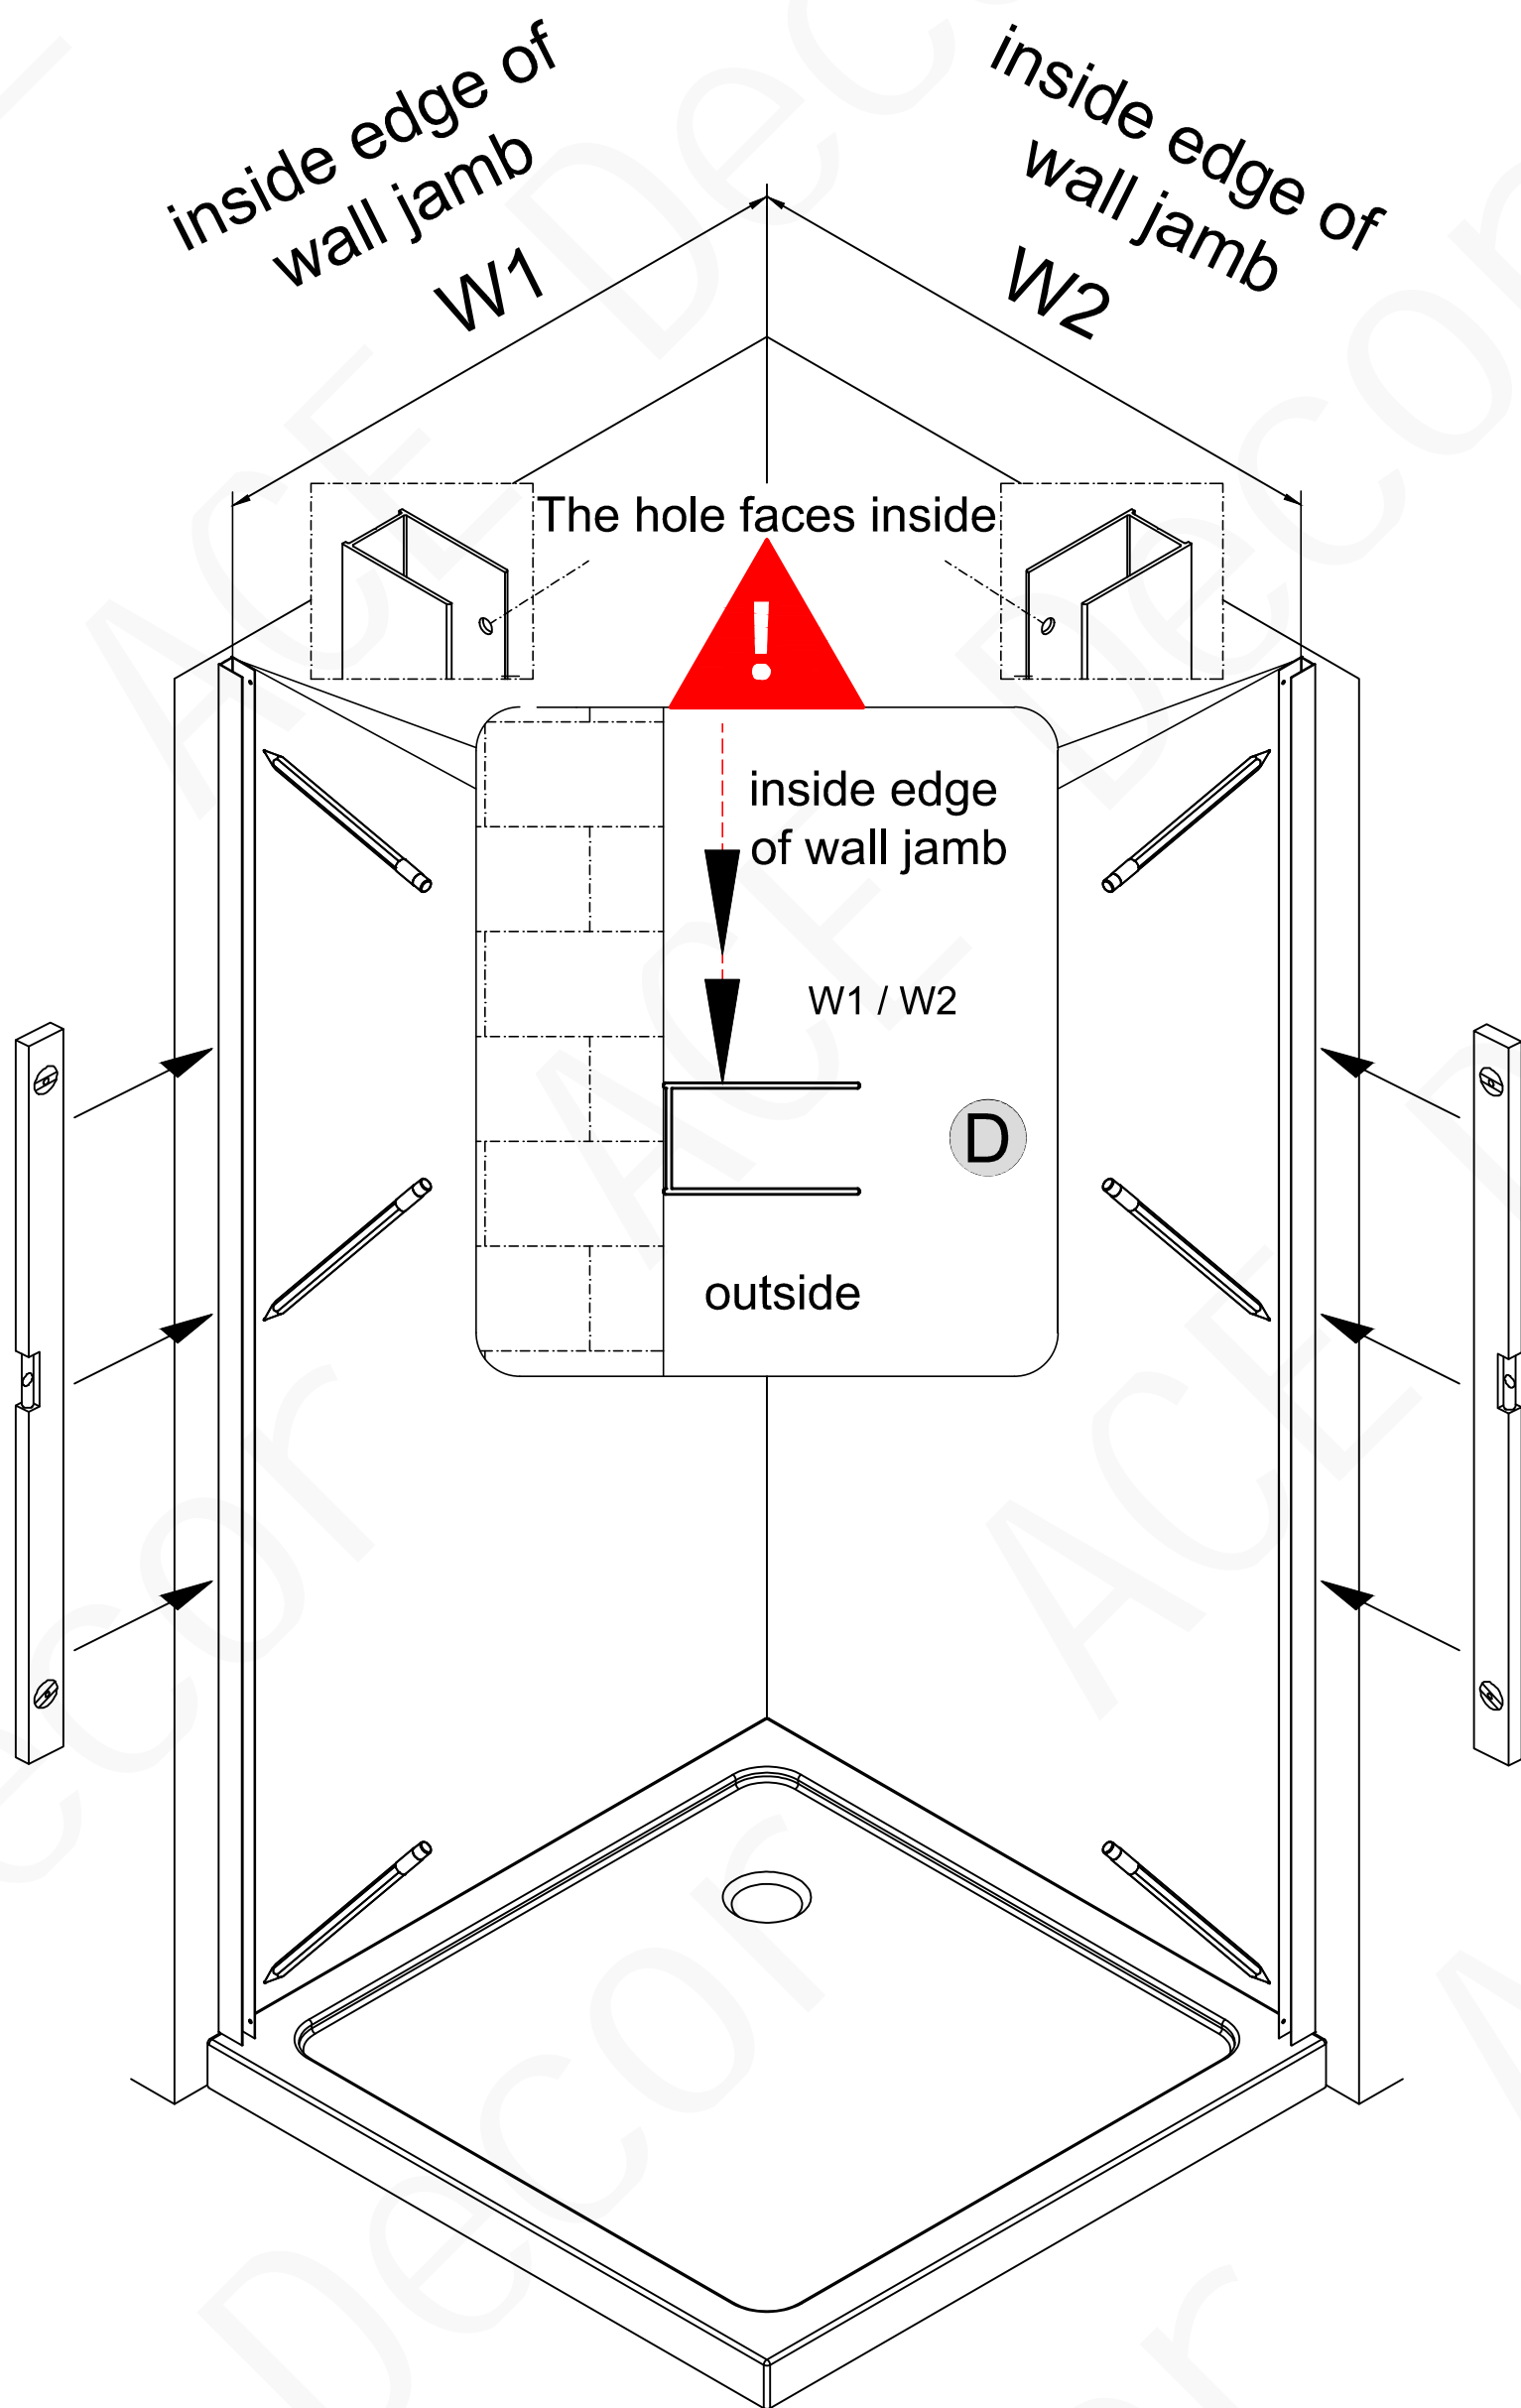


Fig 1

## NOTE

1. Mark the wall at the threshold according to the dimensions for the model size shown in Table 1 below.
2. Place the **Wall Jamb (D)** against the walls and aligned with the new reference marks on the threshold. Use a level to plumb each Wall Jamb. (Table 1, Fig 1)







**NOTE:** This enclosure must be installed at the model size dimensions shown in Table 1. Be sure that the correct size shower enclosure has been ordered to fit the finished dimensions of the base or threshold that the enclosure will be installed on.

**NOTE:** The thickness of the finished wall treatment will effect where the enclosure will align upon the threshold.

## 1-2 Wall Jamb (D) Installation

**CAUTION:** When cutting or drilling metal components or when handling glass, to reduce the risk of personal injury, protective eye wear, gloves, and closed-toe shoes are required.

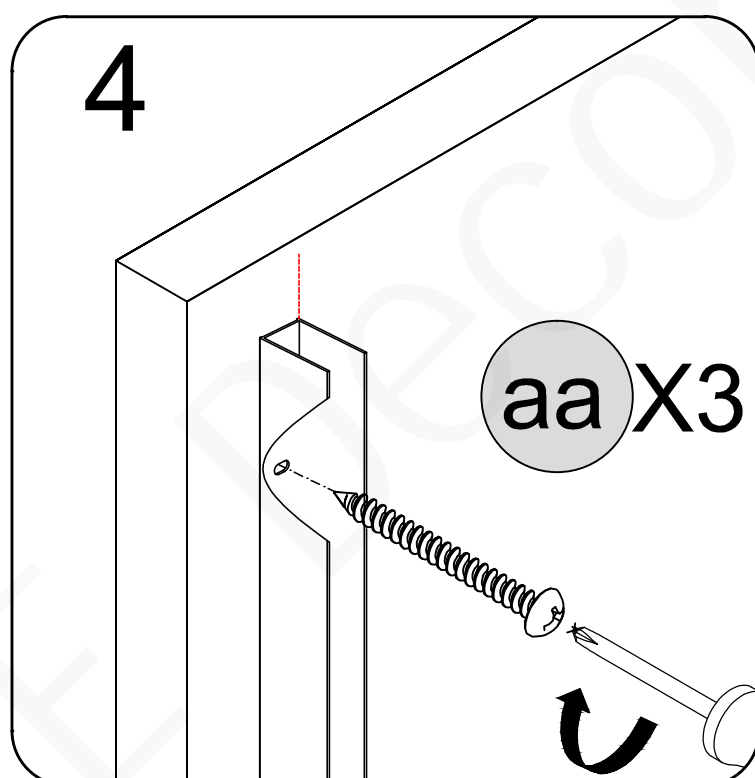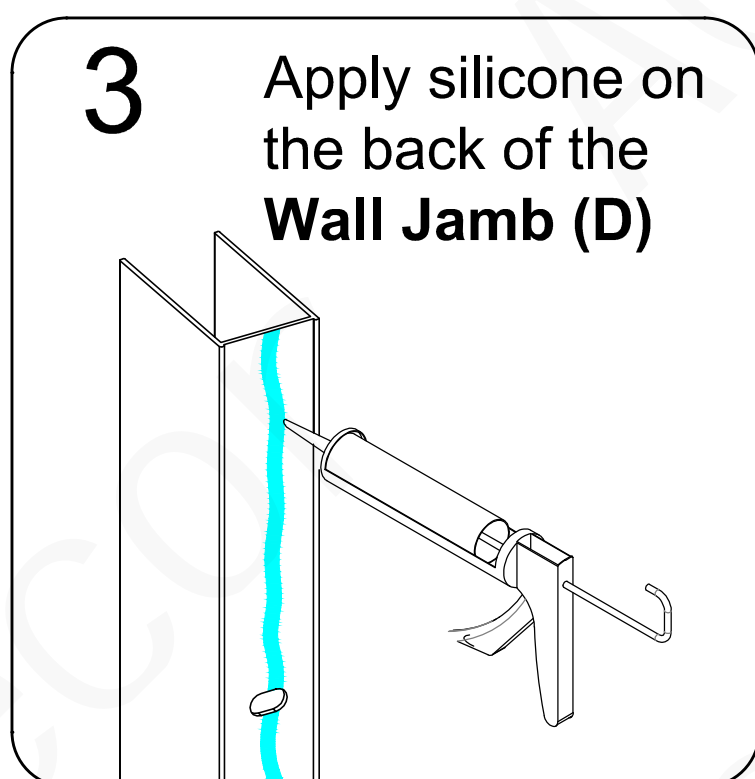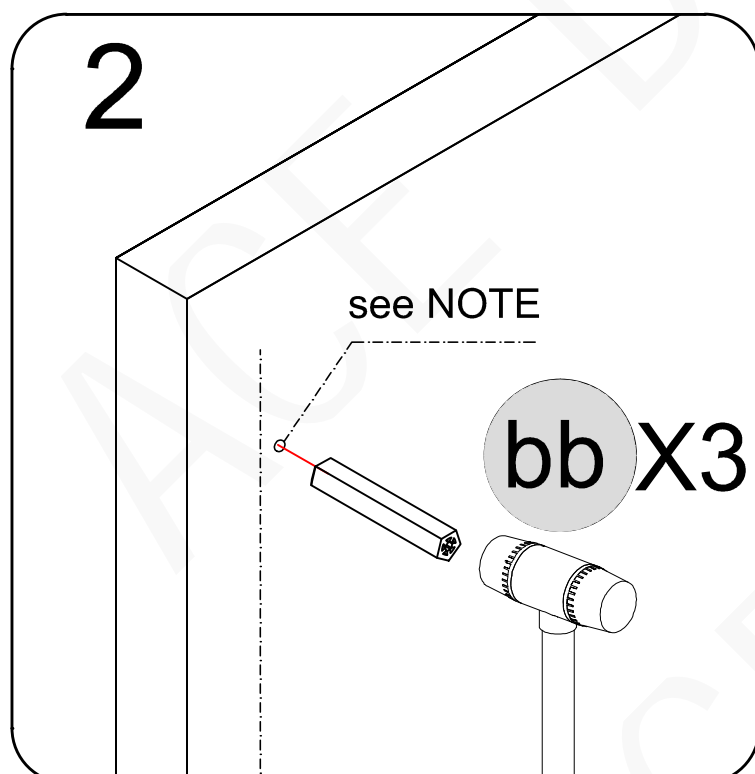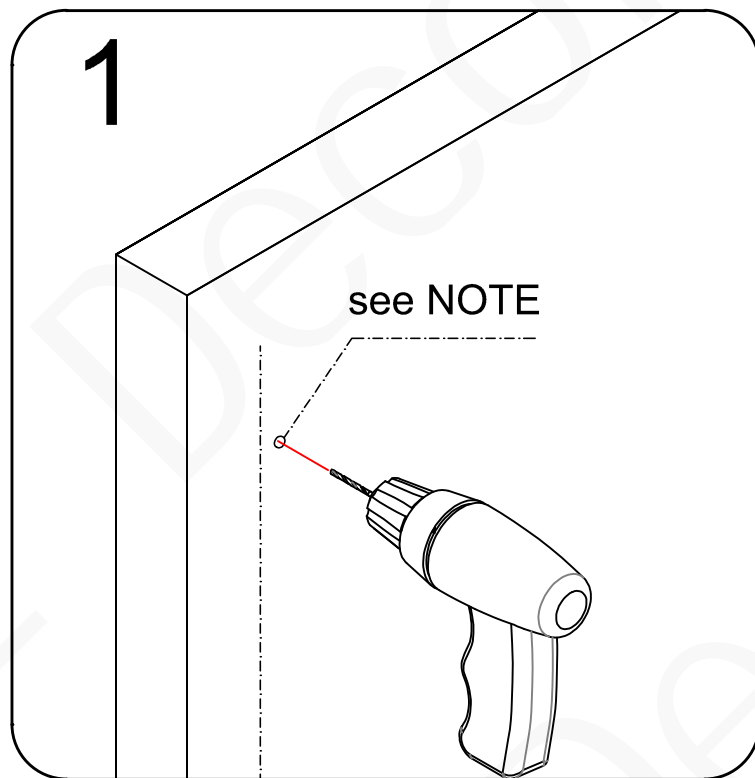

Remove **Wall Jamb (D)** and Drill the holes as Fig.2;

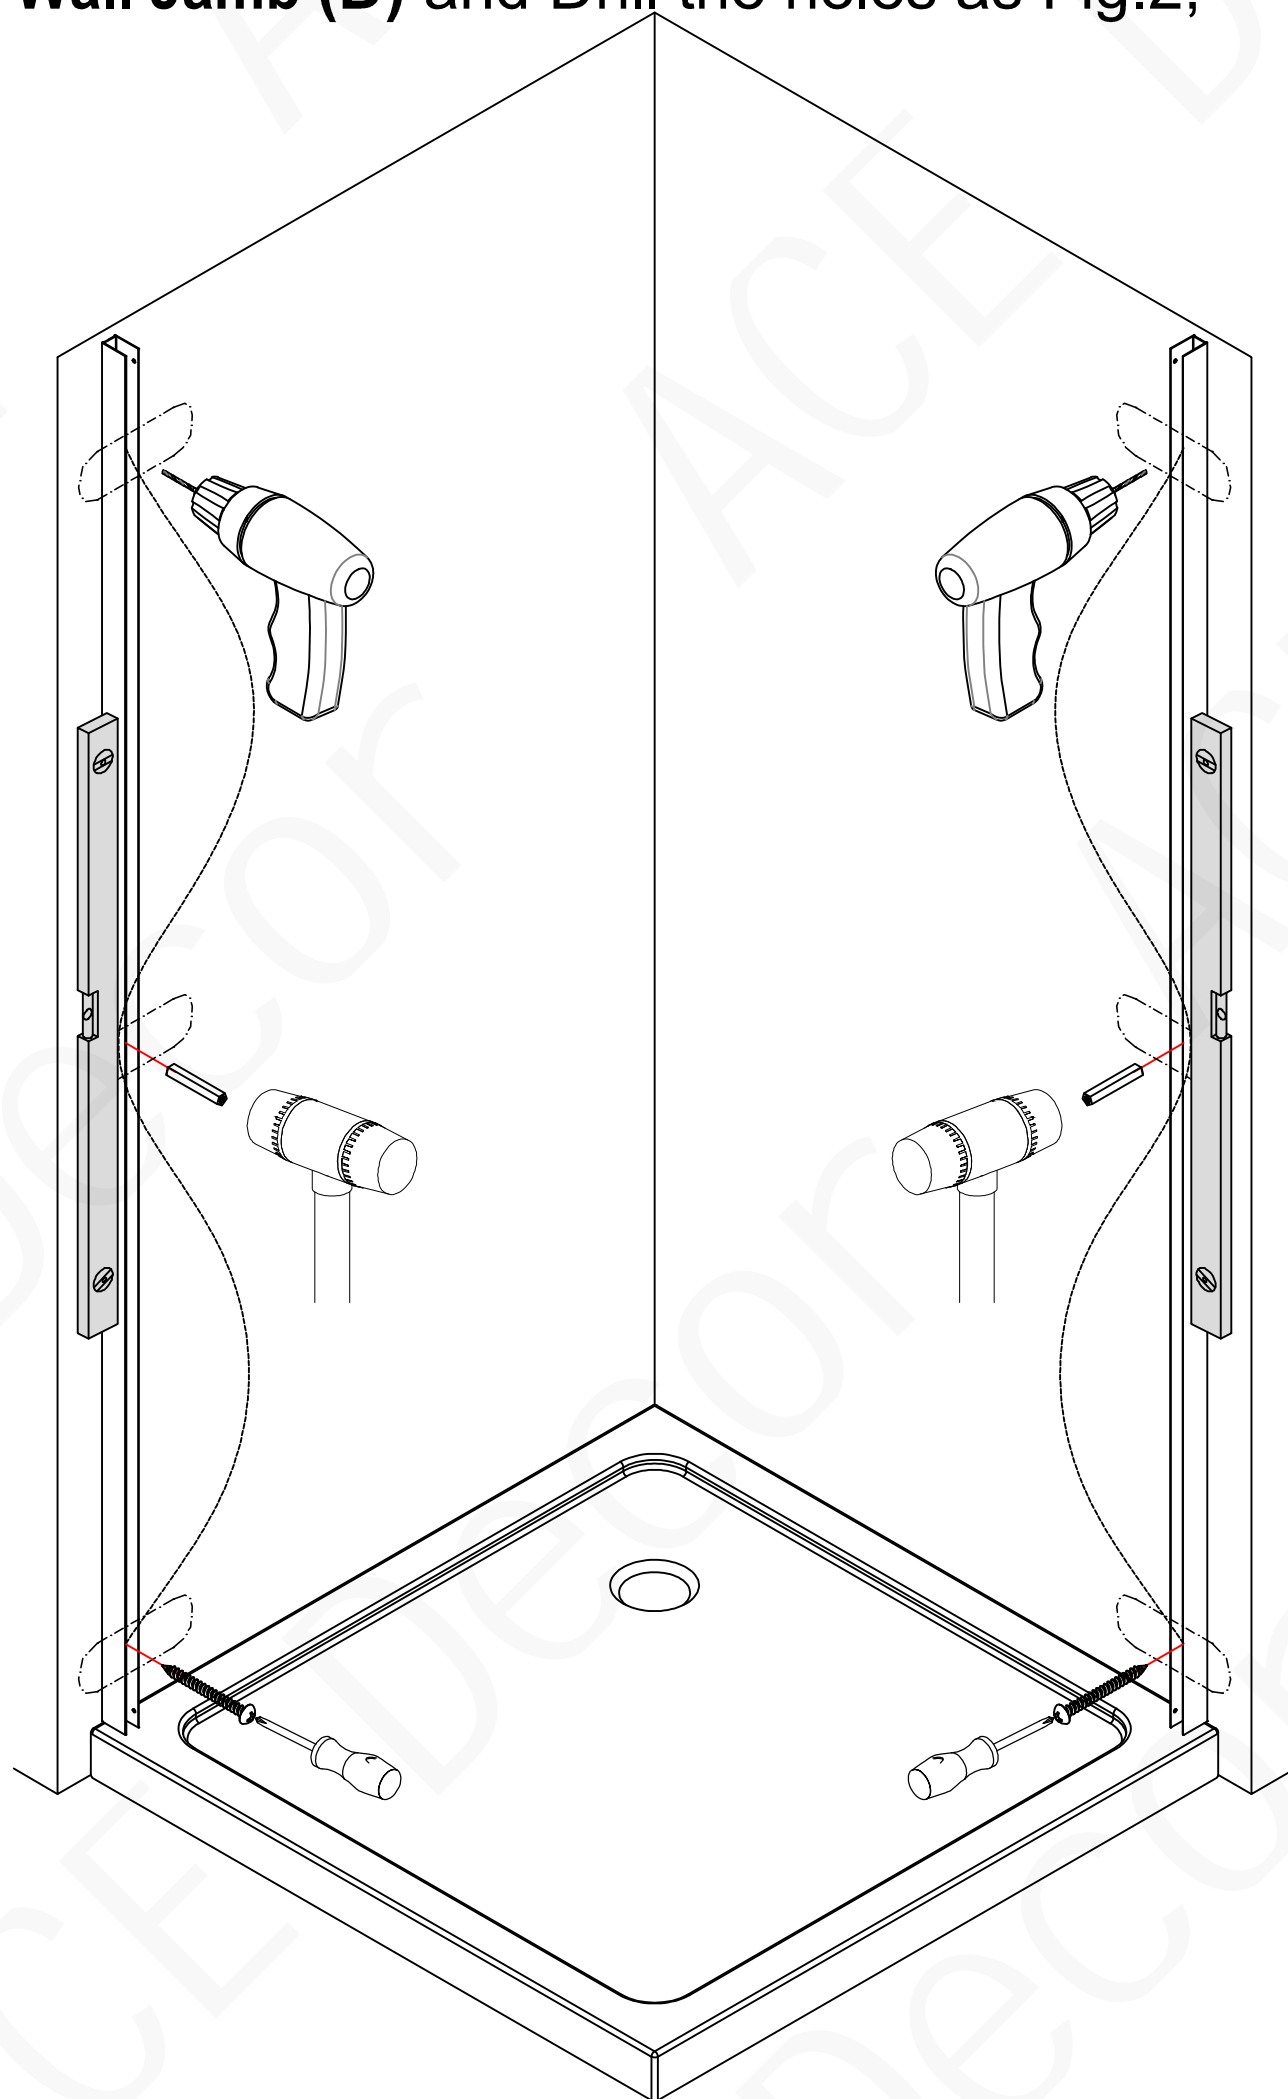


Fig 2

NOTE

- If a Stud is presented behind the wall:  
drill Ø1/8" (3mm) pilot holes into the stud and use the ST4.0 x 30mm **Screws (aa)**
- OR
- If No Stud is presented behind the wall:  
drill Ø1/4" (6mm) holes and insert the **Wall Anchors (bb)** and use the ST4.0 x 30mm **Screws (aa)**.

















