
User's Manual



INSTALLATION INSTRUCTIONS

Installation Manual

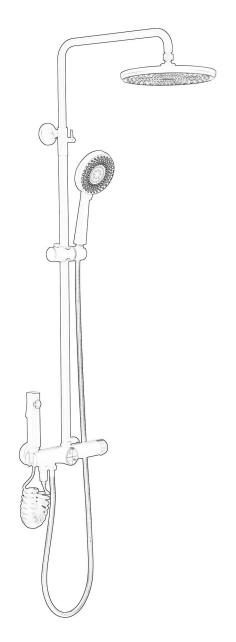

IAPMO RESEARCH AND TESTING, INC.













IAPMO RESEARCH AND TESTING, INC.









CERTIFICATE OF LISTING





IAPMO RESEARCH AND TESTING, INC.















BEFORE INSTALLATION

▶ Notes before installation

- 1. Please check that all components are present.
- 2. Before installation ensure that all feed lines are clear of debris and on/off valve is present.
- 3. Pictures in the manual are general in content and may not represent exactly your purchased faucet.
 - If you are having difficulties please contact a professional plumber.
- 4. If you will be away from home for an extended period you should shut off the main water supply.


▶ Recommend Tools And Materials







Hexagon wrench




Philips Screwdriver



Pipe Tape

► Installation Dimension

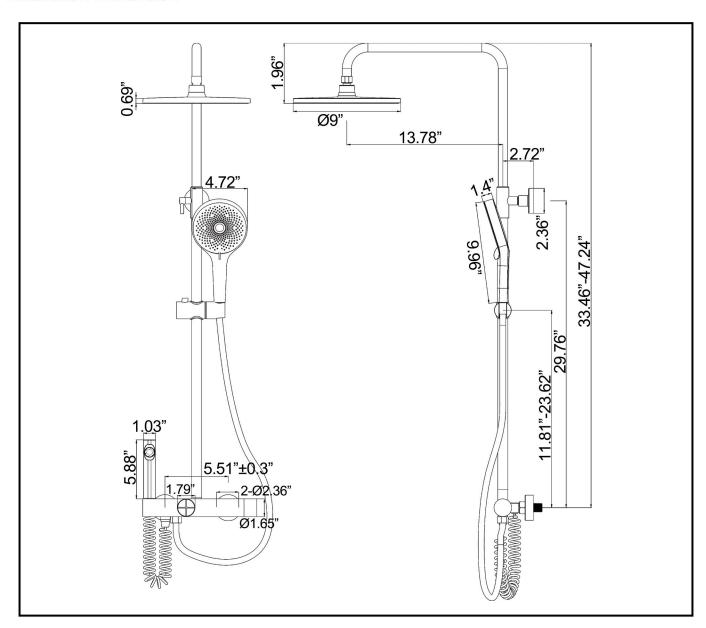


INSTALLATION STEPS

This product has been inspected and debugged by the factory to the best condition. Please do not disassemble and assemble it yourself.


attach the tape.




1. As shown, install the accessories and




Before installing the product, please be sure to remove sundries and sludge from the water pipe to prevent sundries from blocking the product.




2. Install the main body and rubber pad.

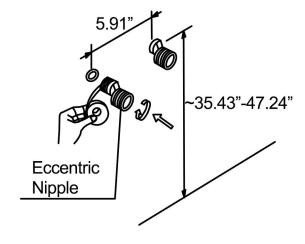


3. Install the riser on the faucet.

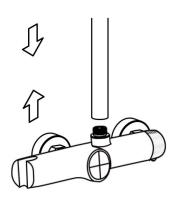


5. Make sure the riser is level, mark the position of the screw holes.

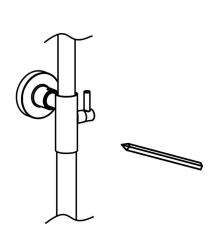

4. Install the mounting piece on the shower arm.

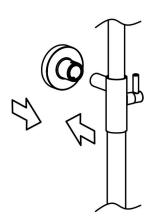


6. Remove the riser and the mounting piece.

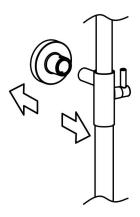


INSTALLATION STEPS


7. Drill the screw holes and install the anchors. Install the mounting piece and mounting piece seal.

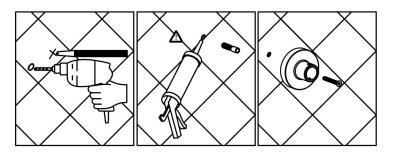


8. Install the riser on the faucet, tighten the screw.

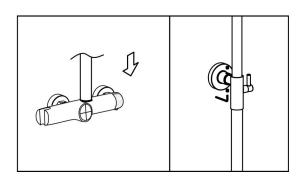


9. Place the hose washer in the short hose end connection Connect this end of the hose to the faucet. Place the screen washer in the long hose end connection. Install the hand shower on this end of the hose. Rest the hand shower in the holder.

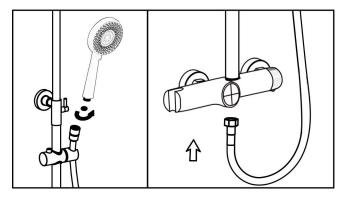

10. Install the shower rain head.

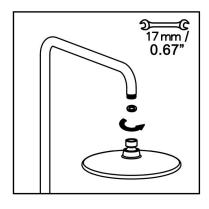

11. Connect the two ends of the hose to the main body and the spray gun respectively, and finally put the spray gun in the holder.

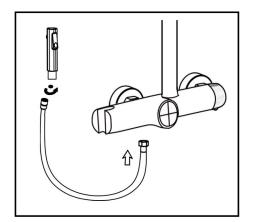

CLEANING CARE

In order to keep the appearance of product clean, bright and good performance, please take care of the product as follows;

- 1. Rinse with water only and dry with soff cotton cloth;
- 2.Use mild liquid and colorless glass cleaner to remove surface dirt and scale film, or use polish without abrasive effect;
- 3.Do not use abrasive deterfgent, polish, emery cloth, paper towel or scraper, etc;
- 4.Do not use acid cleaner, or cleaner and soap with insoluble gran etc;
- 5.In the process of use, mud my accumulate in the bubbler and make the water flow show,

The bubbler can be unscrewed, rinsed with water, and then installed back in place.





